

# GEA Farm Technologies Milking Procedures

10 Simple Steps to More Efficient Milking and Better Milk Quality


Steps **6-10**

## 6 Unit Attachment




Attach unit 60-90 seconds after the start of udder stimulation. Adjust to hang squarely under the udder.

## 7 End of Milking

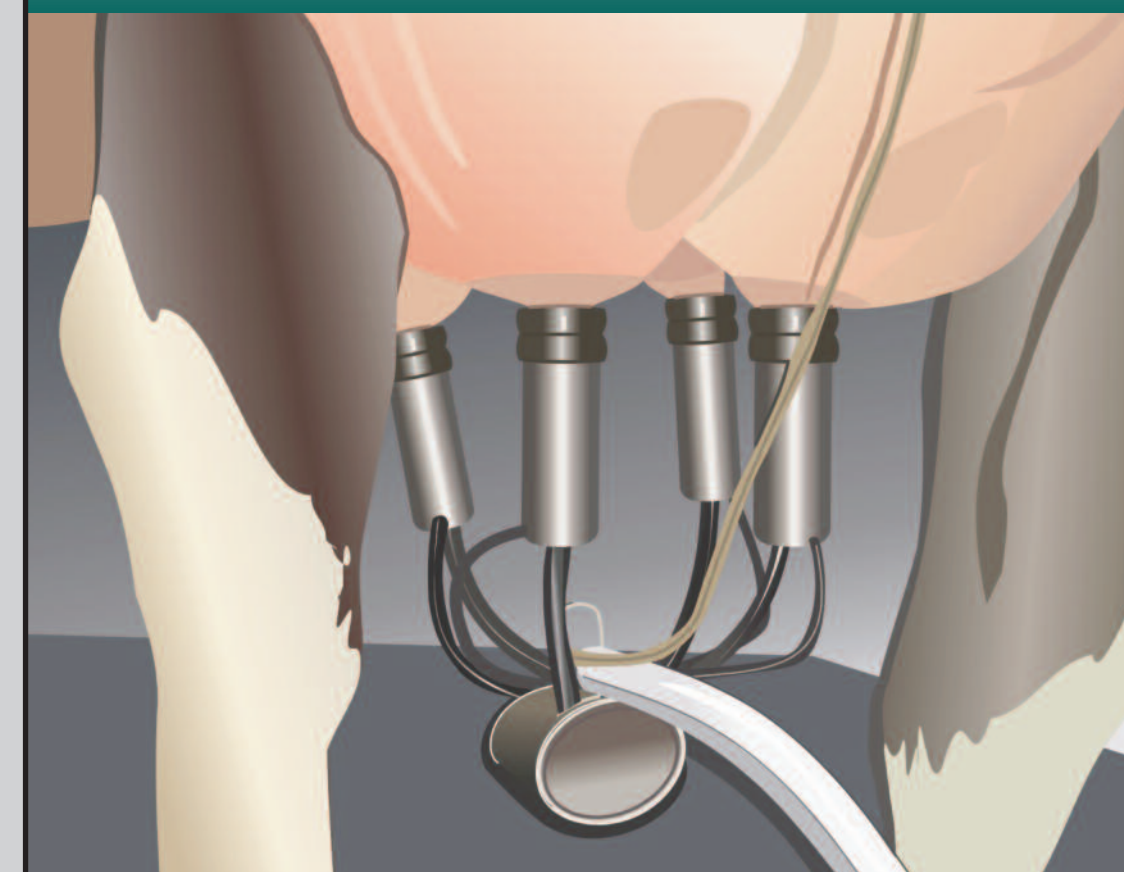

React as soon as possible to correct any liner slips and re-adjust the unit if necessary.

## 8 Unit Removal

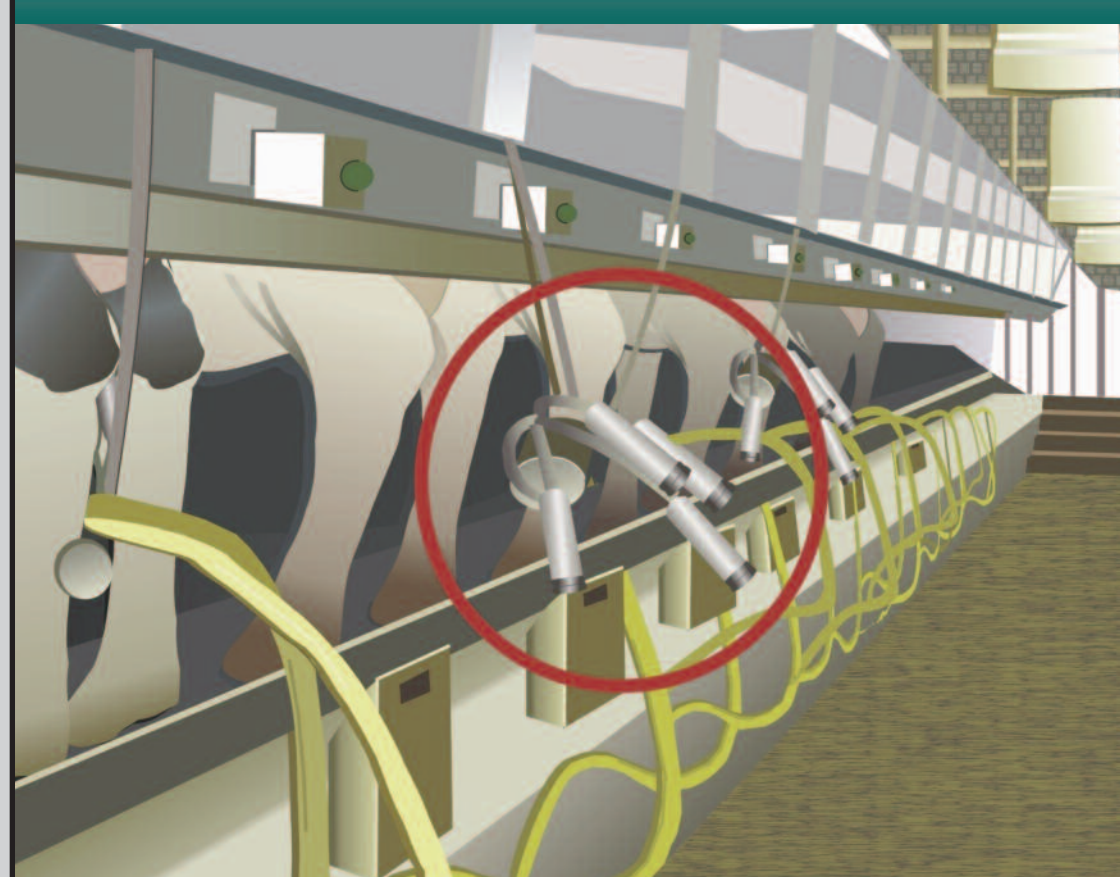

Allow automatic take-offs to remove the unit. If no ATO's, be sure vacuum is off before removing unit.

## 9 Post-Dipping



Thoroughly post-dip all four teats (75-90% of teat surface).

## 10 Manure Removal



Spray manure off the parlor deck, or activate the deck flush, only after cows have left the parlor area.